



INSTALLATION INSTRUCTIONS
&
USER MANUAL

Parking sensor mod. **EPS-DUAL**

- Installation instructions Pag. 3
- User Manual Pag. 12
- Electric schematic Pag. 15
- Kit components Pag. 16

EPS-DUAL can be installed on front or on back bumper.



The system is strictly a driver assistance device, and should not be relied upon as a security device or a substitute for safe driving practices.
Use common sense when reversing, and always follow recommended safe driving guidelines.

INSTALLATION INSTRUCTIONS

1.0

a) The installation of the antenna sensor, constituted by an aluminium adhesive ribbon, must be performed to the inside of the bumper. It is **of some importance** that the zone of application on the inside surface of the bumper corresponds to the **higher part** as regards the ground **and the more protruding**. It is not advisable to install the antenna sensor too low.

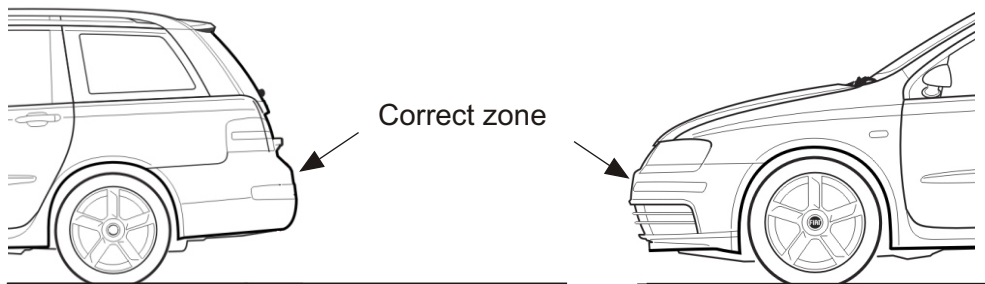


Fig. 1

b) Disassemble the bumper.

2. STARTING PROCEDURE

FRONT BUMPER INSTALLATION

a) Locate a passage where, from the outside at the extremity of the bumper, it is possible to take the ECU harness in the engine compartment driver's side.

b) Through the individuated passages route the connections cable inside the trunk or the engine van leaving the ECU outside. (Fig. 2)



Fig. 2

REAR BUMPER INSTALLATION

a) Identify on the car body the zone close to the extremity of the bumper and, on the side where it is present the back-gear lamp, a possible hole of passage toward the interns of the trunk in order to carry out the connections cable from the electronic unit.



3.0 MOUNTING THE *ECU* AND *ANTENNA SENSOR*

Thoroughly clean with alcohol or nitro solvent (be careful not to use antiadhesive detergent) the inner surface of the bumper of the zone previously identified (see Fig.1) on which will be applied the antenna sensor and the central unit.

Starting from the zone where the central unit + harness will be fixed, start applying the adhesive aluminum tape (antenna sensor) practicing a good pressure to make it well adhere to the inner surface of the bumper*.

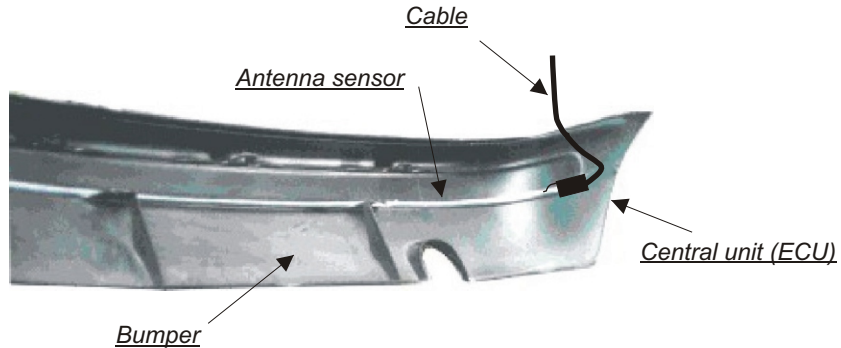



Fig. 3

When the antenna sensor has been attached, covering the whole of the bumper from left to right, the excess length is cut off. Place a piece of the included sticking material at either ends of the antenna sensor to ensure a secure fixing onto the bumper. Its recommended (but not essential) to cover the antenna with a black anti-rust protection paint that is applied to the underneath of a car chassis or similar to protect from the elements (do not use silicon paste).

***NOTE:**

1) It 'advisble to start and finish the application of the antenna sensor tape et about 15 cm from the end of the bumper (Fig. 3).

2) The sensor antenna can not be applied on metal bumpers.

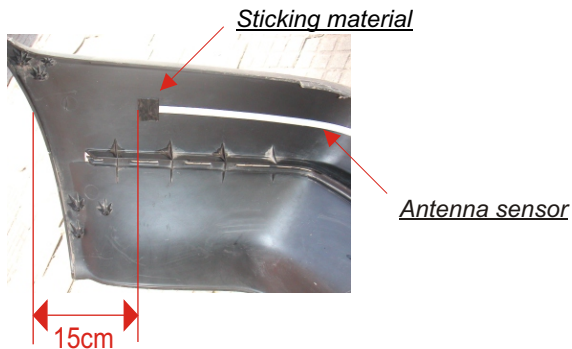

Connect the small fastened cable of the ECU to the *antenna sensor*. Apply a piece of sticking material on the unit and place it on the bumper by a strong pressure (If the ambient temperature is below 10 °C we recommend heating both the mastic and the sticking area on the bumper). It is advisable to use the same material to cover and block the connection (Fig. 5).

Replace the bumper and pull the wiring inside the luggage compartment or engine compartment in order not to leave excess cable outside.

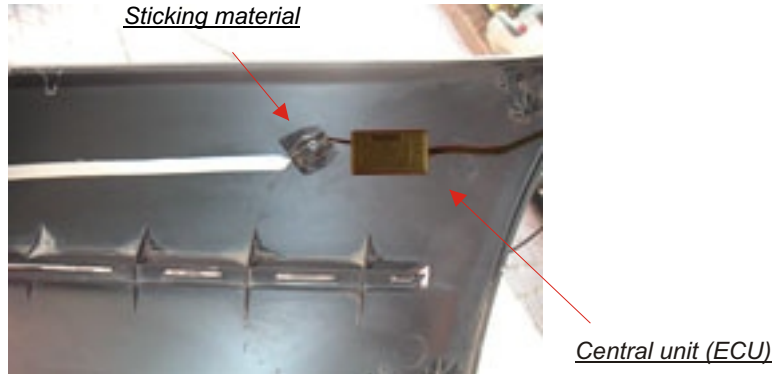


Fig. 5

4.0 ELECTRICAL CONNECTIONS

FRONT INSTALLATION

- a) Connect both black and white wires of the harness to the negative pole of the battery or if not possible to a good electrical ground in the engine van.
- b) Using a normal electrical wire prolong the red wire of the harness bringing it inside the car in order to connect it, through the **push-button** activation, to a 12 Volt subkey (the system is so activated pressing the button).
- c) Connect the two gray leads of the harness to the extension speaker cable (no polarity) and bring it inside the car.

If your vehicle has a metal crash protection bar and the antenna will be within 2 cm's of this metal bar (once the bumper is re-fitted) you can choose the **HIGH SENSITIVITY** option on the connection cables (harness) in order to prevent any reduction in detection range.

We suggest to carry out tests to determine the detection range, pointing out that increasing the sensitivity where it is not necessary, can cause more false alerts.

Summary of connections:

Red: +12 V

Nero: earth

Gray (couple): speaker output

White: to the earth

Yellow: to the earth for high sensitivity

REAR INSTALLATION

a) Connect the red lead of the harness to the positive cable that feeds the reversing lamp.

b) Connect the black lead of the harness to the earth of the reversing lamp.

-- IT ADVISABLE NOT TO CONNECT TO ANY OTHER POINT OF EARTH ON THE CHASSY OF THE CAR --

c) Connect the two gray leads of the harness to the extension speaker cable (no polarity) and bring it inside the car.

if your vehicle has a metal crash protection bar and the antenna will be within 2 cm's of this metal bar (once the bumper is re-fitted) you can choose the **HIGH SENSITIVITY** option on the connection cables (harness) in order to prevent any reduction in detection range.

We suggest to carry out tests to determine the detection range, pointing out that increasing the sensitivity where it is not necessary, can cause more false alerts.

Summary of connections:

Red: +12 V of rear lamp

Nero: earth

Gray (couple): speaker output

White: not connected

Yellow: to the earth for high sensitivity

5. MOUNTING THE SPEAKER

- a) Mount the EPS-DUAL speaker using the included adhesive mount in a proper place in order to ensure a good perception of sound by the driver.
- b) Connect the extension wire to the speaker through its plug-in connector.

6. FINAL TESTING PROCEDURE

- a) Turn on the key, insert the back gear (press the push-button for the front). In a fraction of second the control unit performs a check of the functionality of the system and, if everything has been done correctly, the transducer emits an acoustic sound of "OK" (two notes in rapid succession when installed in the rear and a note if installed before). Once you have this signal the system becomes operational.

Possible problems and their solutions

1. *If the acoustic transducer does not emit any signal check all the connections.*
 2. *If the transducer emits an audible warning signal consisting of 2 notes (one high and one low) repeated 3 times) check the connection of the sensor antenna to the ECU.*
- b) Starting from about 1 meter away from the center of the bumper, slowly approach both hands to simulate a parking maneuver. At a distance of about 60/70 cm will be heard the first acoustic signals whose repetition rate will increase at the decreasing distance to become a fast intermittent sound fast and then a continuous higher frequency sound at about 10-15 cm from the bumper.

WARNING: For a correct simulation reset the system every time you approach.

c) If the system proves to work properly, you can remount the bumper.

Nota: EPS-DUAL starts to give the signaling **only** when the vehicle is being approached to the obstacle; a fixed object in front of the bumper, for instance the hauls hook and a bull bar or the sides walls of a car box, is not signaled and it is not bothered the normal operation of the device.

USER MANUAL

1. OPERATING PRINCIPLE

EPS-DUAL is an innovative parking sensor that uses low energy electromagnetic waves and is able to detect the approach of any kind of obstacle .

The activation of the device is obtained by the insertion of the back gear or by pressing the activation button (if installed on front bumper) and confirmed by a signal of "OK". Once activated, the EPS-DUAL generates around the bumper, on which is installed, a protection zone (Fig. 6). When any obstacle present in the protection zone, tends to approach the bumper you will hear a series of beeps.

WORKING EXAMPLE

A) As soon as the EPS-DUAL is activated the control functionality of the system is carried out in a fraction of second.

In case of anomalies the speaker emits an audible warning signal consisting of 2 notes (one high and one low) repeated 3 times. If this happens check the antenna connection to the ECU.

If the check is **OK** you hear a signal of two notes in quick succession to confirm the proper functioning of the system. If installed on the front bumper the **OK** signal consists of a single note.

B) When approaching an obstacle the system activates the acoustic signal at a distance between the bumper and obstacle (measured in the central area of the bumper) of about 60 / 70 cm with 3 types of sounds:

- 1) **an increase in sequence of "BIP"(alert)** inform the driver that an obstacle is approaching.
- 2) **intermittent sounds of fast repetition rate (alarm)** when the obstacle comes close to the bumper at a distance between 15 and 30 cm.
- 3) **continuous sound at a more acute frequency (risk of contact)** when an obstacle is very close to the bumper (10-15 cm)

Note

- The distances will vary depending on the size of the obstacle, and correspond to the central zone of the bumper; on the lateral edges the distances will decrease is less (see Figure 6)
- If EPS-DUAL is installed on the front the tone of sounds is at a higher frequency in order to more easily distinguish from the back.


WARNING

1. In presence of rain or high moisture weather, the system reduces his sensibility automatically in order to eliminate a part of false alarms that could be given by movement of water on the bumper. In this situation the system could give only the last two frequency signals (alarm and risk of contact). (Fig. 6).


2. As soon as the system is activated an acknowledgement of the surrounding of the bumper is made.

Consequently **it is very important**, during testing operation, not to switch on the system while you are very close to the central unit and antenna sensor in order not to have false information on the working capability of the system.

During the test you must also take into consideration the fact that, after the first approach to the bumper, any subsequent APPROACH without first reset the system , can give false interpretations of the functionality of the sensor due to special characteristics of the EPS-DUAL software specifically done to reduce false signaling in the rainy conditions.

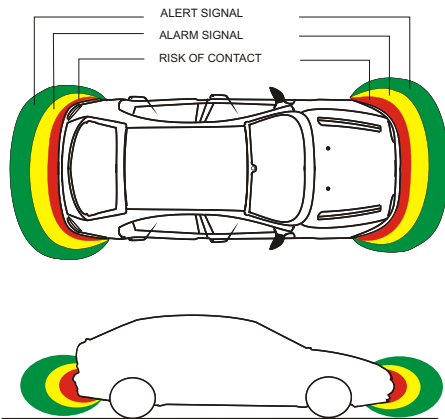

(Fig. 6)

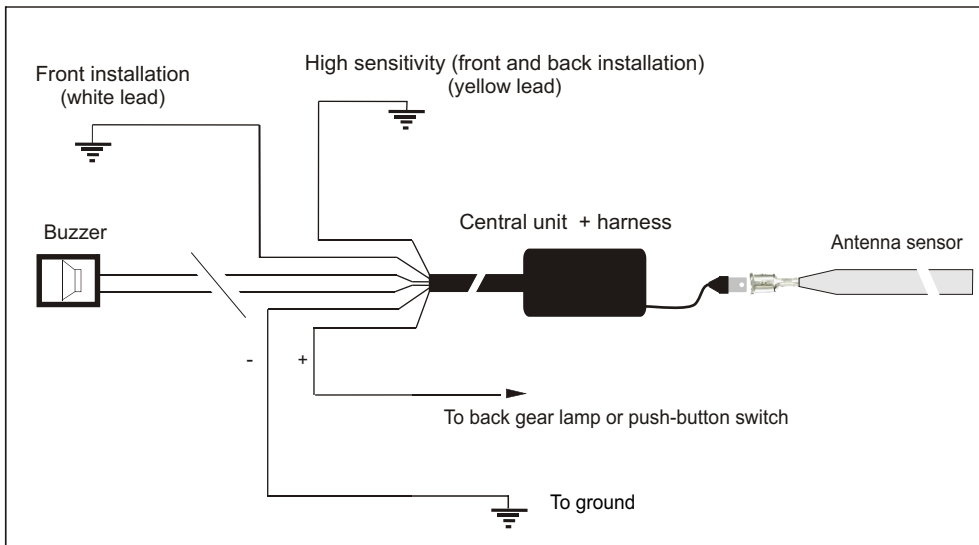

Block schematic for front or back installation

TECHNICAL CHARACTERISTICS

- Operating range from 9,5 to 18V
- Max current absorption 70 mA

- Operating temperature from -20 to +90 °C
- Average distance to begin detection 70-80 cm



Push button



Buzzer wire



Buzzer



Antenna sensor



Central module
+ harness



Sticking material

PROXEL S.r.l. -Via Val Della Torre 39 -10149 - TORINO (ITALY) - Tel. +39 011 296022 -

Fax +39 011 2218053

Technical info: eps@proxel.com